

	580	600	700	800	900
--	-----	-----	-----	-----	-----

TS Type-A EN CINC

Wired LAN connection of your printer to an access point

Issue

Cause and Solution

- [Wired Setup](#)

Wired Setup


Before Configuring Wired Settings

REFERENCE


Make sure that the printer is turned on.




1. You will need an Ethernet cable (sold separately).

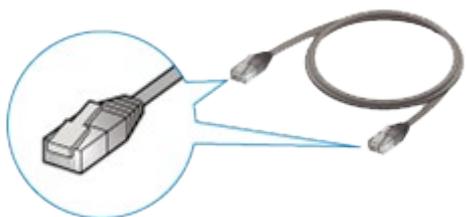

2. Remove the Cap (A) from the port located on the left side at the back of the printer.

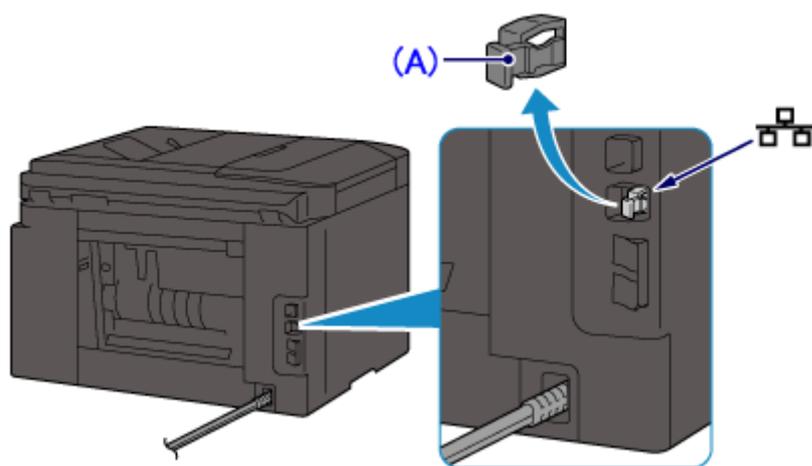


3. Connect the printer and a network device (router, etc.) with an Ethernet cable (B).

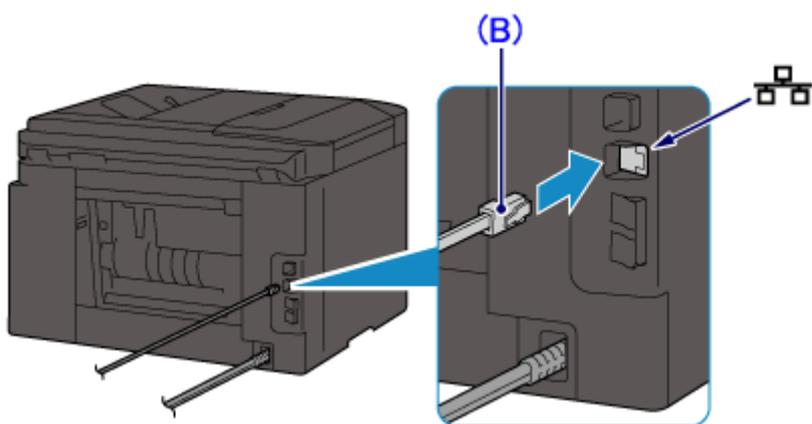

CAUTION(old)

Do not connect to any other port.


4. Press the HOME button (C) on the printer.

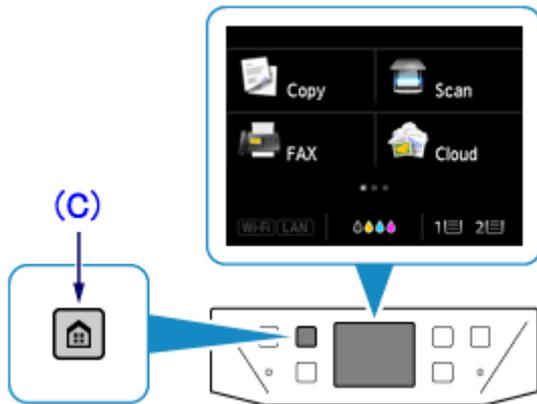


5. Tap the bottom left (D) of the screen.



6. Tap [Wired LAN active].

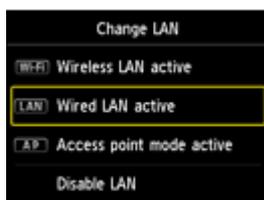

When connection is complete, [LAN] appears at the bottom left of the screen.

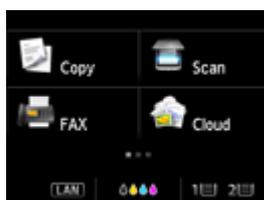

The wired LAN setup is completed.

Install the Software.

-> [[How to install the software from the Setup CD or from the Setup & Manual site \(wired LAN connection\)](#)]

Related information

Target products

SJSERIES

•MB2330 •MB5330 •MB5030

	580	600	700	800	900
--	-----	-----	-----	-----	-----