





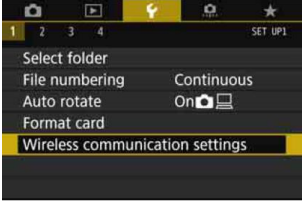 

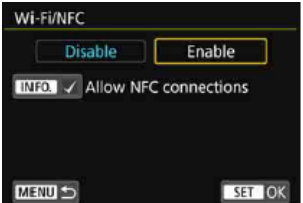 
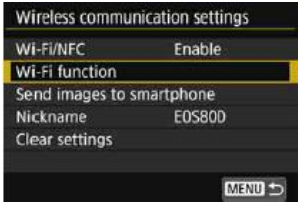 




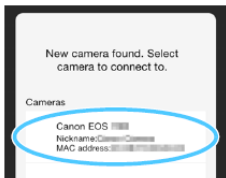 



Canon Camera Connect App



Starter Guide

1	Download & install the Canon Camera Connect App from the App store or Google Play	  
2	Press the Menu button on your camera OR Press the Wi-Fi Connect button on selected models (skip to step 7)	 OR 
3	Navigate to the  tab in the camera menu and select “Wireless communication settings” followed by the “Set” button	
4	Select Wi-Fi / NFC and press the “Set” button	
5	Ensure Wi-Fi / NFC is enabled and press the “Set” button	

6	Select “Wi-Fi function”	
7	Select “Connect to Smartphone”	
8	Select “Easy Connection”	
9	Smartphone Screen: Search available Wi-Fi networks & connect to the camera’s SSID network using the password supplied on your camera’s screen	
10	Start Canon Camera Connect app on your smartphone	
11	Select the camera you wish to connect to on your smartphone	
12	Confirm connection with smartphone on your camera screen	 <p>The device name set on Camera Connect</p>

**Now you’re connected and ready to transfer images or
shoot wirelessly with the Canon Camera Connect app**